

Com-Center Start:

- Attach AC power cord to Com-Center, then plug into the nearest wall outlet.
- If wall outlet is not available insert rechargeable battery into slot at back of Com-Center (silver contacts must be in proper position).
- OR use five brand name AA batteries in battery sled (provides up to 6 hours of operation).
- Turn Com-Center ON (switch on back panel).

Note: If rechargeable battery and AC power cord are used simultaneously, the battery will receive a trickle charge while system is in use.

Com-Center Facts:

Line of Sight

- For optimum range, position the Com-Center so that the radio signals have a clear path to the wireless headsets.

Conference Feature

- Red & Green LED lights indicate two separate channels are in use. Press Conference button for amber LED so all coaches can communicate.



Note: Switch connects both channels, and LED MUST be amber for systems of 5 or more coaches.

Wireless Headset Start:

- Insert battery into headset.
- Headset will automatically turn ON.



Note: Slide battery into compartment bottom first, then press top to snap into place. Push latch up to eject.

Blue LED Indications:

- Blue LED blinks as headset searches for signal.
- LED turns SOLID BLUE automatically when headset senses the signal from the Com-Center.
- Solid blue LED means headset is communicating.

LED




Note: When the wireless headset LED is blinking, it means the headset is searching for the signal. When the Com-Center is ON the headset LED will automatically change to solid blue (indicating communication).

Headset Controls:

Power Button

Subsequent to performing the headset start-up procedure, the power button is used to simply turn the headset on and off.

- OFF by pressing & holding until LED goes out.
- ON by quick clicking, LED illuminates.

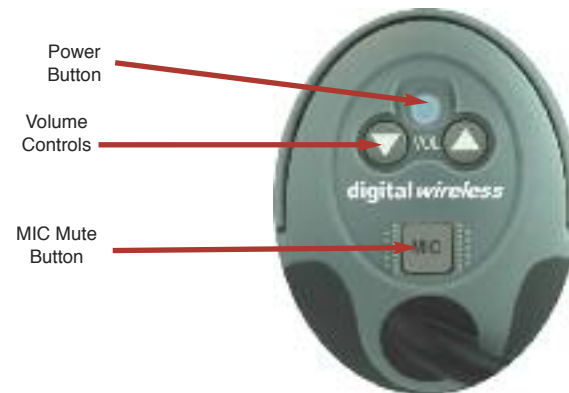

Volume

- Headset volume is set to middle level upon power-up. Volume control buttons adjust to any of five settings.

MIC Mute - grey button

- Click MIC button to mute microphone, audible tone confirms change.
- Repetitive beep indicates headset battery low.

Battery Charging

- System includes 2 rechargeable batteries: one battery for the 1st half & one battery for the 2 half.
- Plug charger AC adapter into charging base and into wall outlet.

IMPORTANT: There are two AC adapters supplied with this system. The Com-Center adapter will fit ONLY the Com-Center.

The Charger adapter will fit ONLY the Charger.

- Batteries should snap into charging slot securely.
- Charge time 2 - 4 hours.

LED Indicators:

- GREEN: Fully charged
- RED: Charging
- RED Flashing: Battery Faulty
- NO LIGHT: Battery improperly inserted



Battery Facts

- COMSTAR high capacity Lithium batteries provide up to 10 hours of operation.
- Lithium batteries do not develop a memory. **Do not drain batteries after use.**

Important Tips

Microphone Placement

- COMSTAR headsets include a special noise cancelling microphone. For optimum performance place directly in front of, and approximately 1 - 2" from the user's mouth.



Com-Center Placement

- Line of sight: for optimum range, position the Com-Center so that the radio signals have a clear path to the wireless headset/radios.

Rain Game / Storage

- Place the Com-Center in a protected dry location during use.
- Before storing, wipe down all equipment and leave out in a well ventilated room to fully dry.
- Do not store in individual drawstring bags or carrying case while wet.



Duplex Wireless System

Caution

Compartment on bottom of Com-Center houses switches for factory programming. Call Porta Phone for more information: 1-800-233-1113.



145 Dean Knauss Drive
 Narragansett, RI 02882
 Tel: 1-800-399-5994
 In RI: 401-782-4966
 Fax: 401-789-7300
 www.eartec.com